











































 





 

 



 







 







Original	Replacement
 Power	 Power
 Energy Saving	 Sleep / Timer
 AV Mode	 Picture / Format
 Input	 AV / Input / RDS
 Tv/Rad	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.Vlew	 Setup / OPT /

Original	Replacement
 Vol+	 Vol+
 FAV/Mark/Char/Nu	 Fav / Marker / PC
 P+	 CH+ / Page+
 Vol-	 Vol-
 3D	 Zoom / Size
 Mute/Delete	 Mute / Dimmer
 P-	 CH- / Page-
 Menu	 Menu / Home
 NetCast	 Sound / Title
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return





	Original	Replacement	Original	Replacement
	Guide	Guide / EPG / -/--		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue/L/R/Select	Blue / Prime Video / Random		
	Text	Text / Goto		
	T.Opt	Shift + Setup / OPT / Tools		
	Subtitle	Subtitle / EQ		
	Stop	Stop / Hold		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Simplink	Display / Media		
	Info	Info / Angle		
	AD	Audio / Lang I/II		
	APP/*	Shift + Green / APP / Repeat		

