









 















Original	Replacement
Operate	Power
Open / Close	Eject / Surround
1	1
2	2
3	3
CH +	CH+ / Page+
4	4
5	5
6	6
CH -	CH- / Page-
7	7
8	8
9	9
Direct	Setup / OPT /
-/--	Guide / EPG / -/--
0	0
C / Erase	Shift + Exit / Cancel / Clear

Original	Replacement
Show View	Info / Angle
TV / DVD	TV/Radio /
Timer On / Off	Sleep / Timer
Time Shift	Text / Goto
Dubbing	Vol-
P in P	Picture / Format
Input	AV / Input / RDS
HDD	Shift + 7
Start Menu	Menu / Home
DVD	Shift + 2
Rec List / DVD Top Menu	Smart / List
Up	Up
Original / Playlist / DVD Menu	D.Menu / Top
Left	Left
Set / Enter	OK
Right	Right
Exit	Exit / Cancel / Clear





Original	Replacement
	 Down
	 Back / Return
	 Blue / Prime Video / Random
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Pause / Step / Freeze
	 Stop / Hold
	 Shift + Slow / Play
	 I<< / Preset-
	 >>I / Preset+
	 Sound / Title
	 Shift + Red / Netflix /
	 Zoom / Size

Original	Replacement
	 Shift + Info / Angle
	 Audio / Lang I/II
	 Subtitle / EQ
	 Rec / Rec Mode
	 Shift + Stop /
	 Shift + Pause / Step /
	 Shift + Rec / Rec Mode
	 Shift + Eject / Surround
	 Fav / Marker / PC
	 Vol+
	 Display / Media

