



Original	Replacement
	Power
	AV / Input / RDS
	Display / Media
	Fav / Marker / PC
	1
	Up
	Left
	OK
	Right
	Down
	Back / Return
	D.Menu / Top
	Menu / Home
	Vol+
	CH+ / Page+
	Vol-
	Mute / Dimmer

Original	Replacement
	CH- / Page-
	<< / Tune-
	Play / Slow
	Pause / Step / Freeze
	>> / Tune+
	Picture / Format
	Sound / Title
	Yellow / YouTube / Repeat
	Green / APP / Repeat
	Blue / Prime Video / Random
	Red / Netflix / Search

