



| Original | Replacement |
|------------------|--------------------------|
| Power | Power |
| Power Tv | Shift + Power |
| DVD | Shift + 2 |
| VCR | Shift + 4 |
| Eject/Open-Close | Eject / Surround |
| AV Input Tv | Shift + AV / Input / RDS |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| PR+ Tv | Shift + CH+ / |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| PR- Tv | Shift + CH- / |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |

| Original | Replacement |
|------------|-----------------------|
| Vol+ Tv | Vol+ |
| Rec | Rec / Rec Mode |
| 0 | 0 |
| AV Input | AV / Input / RDS |
| Vol- Tv | Vol- |
| << Scan | << / Tune- |
| Scan >> | >> / Tune+ |
| I<< Skip | I<< / Preset- |
| Skip >>I | >>I / Preset+ |
| Pause/Step | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| Home | Menu / Home |
| PR/TRK+ | CH+ / Page+ |
| Up | Up |
| Menu/List | D.Menu / Top |
| Left | Left |



