

 



 

 

 




 




 

 















Original	Replacement	Original	Replacement
	Power		CH- / Page-
	1		Display / Media
	2		Menu / Home
	3		AV / Input / RDS
	4		Up
	5		Left
	6		OK
	7		Right
	8		Down
	9		Back / Return
	Guide / EPG / -/--		D.Menu / Top
	0		Red / Netflix / Search
	Fav / Marker / PC		Green / APP / Repeat
	Vol+		Yellow / YouTube / Repeat
	CH+ / Page+		Blue / Prime Video / Random
	Mute / Dimmer		Shift + Red / Netflix /
	Vol-		Shift + Blue / Prime Video / Random



