



Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Red/M	 Red / Netflix / Search
 5	 5	 Green/Sound	 Sound / Title
 6	 6	 Green/Sound	 Green / APP / Repeat
 7	 7	 Yellow/Vision	 Yellow / YouTube / Repeat
 8	 8	 Blue/Menu	 Blue / Prime Video / Random
 9	 9	 Blue/Menu	 Menu / Home
 0	 0	 Text	 Text / Goto
 i	 Info / Angle	 Size	 Zoom / Size
 Mute	 Mute / Dimmer	 Stop	 Stop / Hold
 ideal	 Smart / List		
 Back	 Back / Return		
 TV	 TV/Radio /		
 TV	 Shift + 1		





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info / Angle
	Mute		Mute / Dimmer
	ideal		Smart / List
	Back		Back / Return
	TV		TV/Radio /
	TV		Shift + 1
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Red/M		Red / Netflix / Search
	Green/Sound		Audio / Lang I/II
	Green/Sound		Green / APP / Repeat
	Yellow/Vision		Yellow / YouTube / Repeat
	Blue/Menu		Blue / Prime Video / Random
	Blue/Menu		Menu / Home
	Text		Text / Goto
	Size		Zoom / Size
	Stop		Stop / Hold





Original	Replacement	Original	Replacement
Power	Power	Up	Up
1	1	Left	Left
2	2	Right	Right
3	3	Down	Down
4	4	Red/M	Red / Netflix / Search
5	5	Green/Sound	Green / APP / Repeat
6	6	Green/Sound	Sound / Title
7	7	Yellow/Vision	Yellow / YouTube / Repeat
8	8	Blue/Menu	Blue / Prime Video / Random
9	9	Blue/Menu	Menu / Home
0	0	Text	Text / Goto
i	Info / Angle	Size	Zoom / Size
Mute	Mute / Dimmer	Stop	Stop / Hold
ideal	Smart / List		
Back	Back / Return		
TV	TV/Radio /		
TV	Shift + 1		

