

 



 



 


 
 











 
 



 



 


 





 






 
 





 

 






















Original	Replacement	Original	Replacement
 Power	 Power	 XDSS plus	 Smart / List
 Mute	 Mute / Dimmer	 Sound Mode	 Sound / Title
 Tuner/Band	 Shift + 6	 Audio	 Audio / Lang I/II
 DVD	 Shift + 2	 Subtitle	 Subtitle / EQ
 Portable	 Shift + 3	 Return	 Back / Return
 USB	 Shift + 8	 Setup	 Setup / OPT /
 1	 1	 Up/Presets+	 Up
 2	 2	 Display	 Display / Media
 3	 3	 Left/Tun.-	 Left
 4	 4	 Select/Enter	 OK
 5	 5	 Right/Tun.+	 Right
 6	 6	 Menu	 Menu / Home
 7	 7	 Down/Presets-	 Down
 8	 8	 Title	 Shift + Sound / Title
 9	 9	 Prog. Memo	 TV/Radio /
 0	 0	 <</Scan-	 << / Tune-
 EQ	 Shift + Subtitle / EQ	 >>/Scan+	 >> / Tune+





Original	Replacement
 Volume+	 Vol+
 Repeat	 Green / APP / Repeat
 </Slow-	 CH- / Page-
 >/Slow+	 CH+ / Page+
 Repeat A/B	 Yellow / YouTube / Repeat
 <</Skip-	 << / Preset-
 >>/Skip+	 >> / Preset+
 Volume-	 Vol-
 Stop/Mo/ST	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Clear	 Exit / Cancel / Clear
 Zoom	 Zoom / Size
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Sleep	 Sleep / Timer
 RDS	 AV / Input / RDS

Original	Replacement
 PTY	 Picture / Format

