


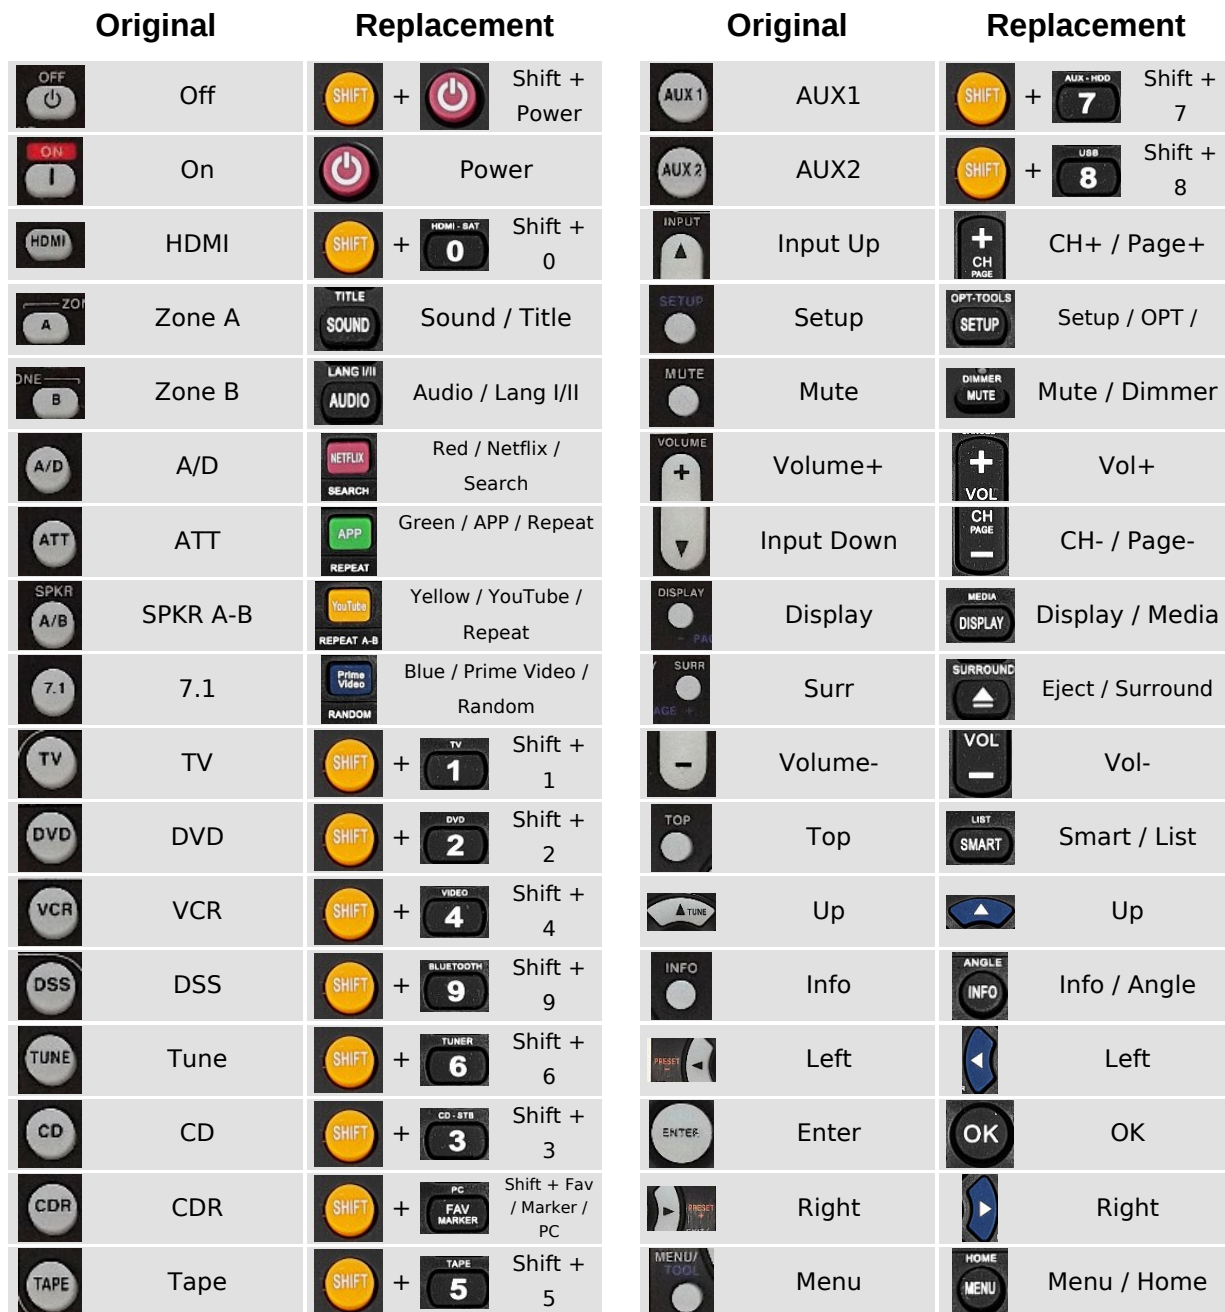






Original	Replacement
	Power
	Setup
	Mute
	Volume+
	Display
	Volume-
	Up
	Left
	Enter
	Right
	Menu
	Down
	Memo
	Pause
	Play
	Stop
	I<<
	Power
	Setup / OPT /
	Mute / Dimmer
	Vol+
	Display / Media
	Vol-
	Up
	Left
	OK
	Right
	Menu / Home
	Down
	Smart / List
	Pause / Step / Freeze
	Play / Slow
	Stop / Hold
	I<< / Preset-

Original	Replacement
	>>I
	<<
	>>
	1
	2
	3
	Repeat
	4
	5
	6
	Random
	7
	8
	9
	CL
	0
	+10
	>>I / Preset+
	<< / Tune-
	>> / Tune+
	1
	2
	3
	Green / APP / Repeat
	4
	5
	6
	Blue / Prime Video / Random
	7
	8
	9
	Exit / Cancel / Clear
	0
	Guide / EPG / -/-



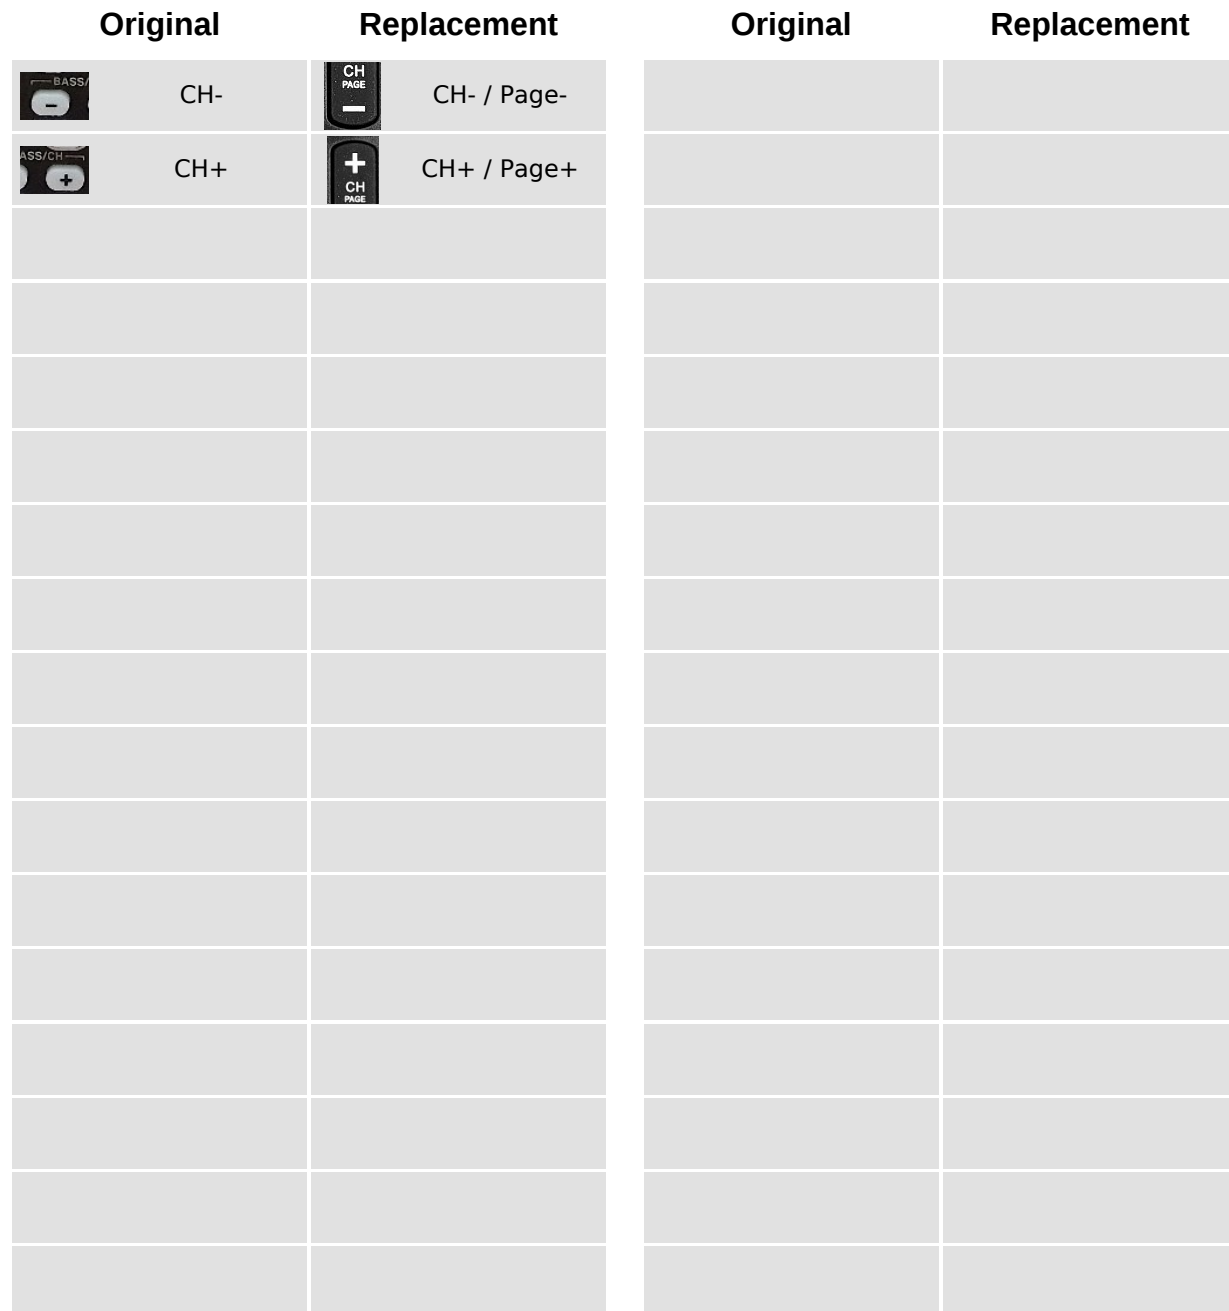



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Volume-		Vol-
	Tune+		>> / Tune+
	Info		Info / Angle
	Preset-		I<< / Preset-
	Enter		OK
	Preset+		>>I / Preset+
	Menu		Menu / Home
	Tune-		<< / Tune-
	Memo		Smart / List
	T.Mode		Text / Goto
	P.Scan		D.Menu / Top
	Band		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CL		Exit / Cancel / Clear
	0		0
	CAT-		CH- / Page-
	CAT+		CH+ / Page+

