



 

 



 



 



 

 

 

 

 

 

 




 








 







Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 On Screen	 Display / Media
 2	 2
 Repeat	 Green / APP / Repeat
 3	 3
 Program	 TV/Radio /
 Sleep	 Sleep / Timer
 4	 4
 Surround	 Shift + Eject / Surround
 5	 5
 Sound	 Sound / Title
 6	 6
 Zoom	 Zoom / Size
 Aspect	 Shift + Picture / Format
 7	 7

Original	Replacement
 User	 Guide / EPG / -/-
 8	 8
 9	 9
 0	 0
 Source	 AV / Input / RDS
 Color Mode	 Picture / Format
 Break	 Fav / Marker / PC
 Play	 Play / Slow
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Setup	 Setup / OPT /
 Up	 Up
 Menu	 Menu / Home





Original		Replacement		Original	Replacement
	Left		Left		
	Enter		OK		
	Right		Right		
	Visual Setup		Smart / List		
	Down		Down		
	Return		Back / Return		
	Keystone+		CH+ / Page+		
	Mic Input Level		Blue / Prime Video / Random		
	Volume+		Vol+		
	Keystone-		CH- / Page-		
	Mute		Mute / Dimmer		
	Volume-		Vol-		
	Audio		Audio / Lang I/II		
	Subtitle		Subtitle / EQ		
	Angle		Info / Angle		

