

 


 


 






Original	Replacement
 Standby	 Power
 Open/Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 Prog	 TV/Radio /
 4	 4
 5	 5
 6	 6
 A-B	 Yellow / YouTube / Repeat
 7	 7
 8	 8
 9	 9
 Repeat	 Green / APP / Repeat
 Goto	 Text / Goto
 0/10	 0

Original	Replacement
 10+	 Guide / EPG / -/--
 L/R/ST/Mo	 Sound / Title
 P/N	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Stop/Mem	 Stop / Hold
 I<</Station-	 I<< / Preset-
 >>I/Station+	 >>I / Preset+
 Play/Pause/FM/AM	 Play / Slow
 Slow	 Shift + Play /
 <</Search-	 << / Tune-
 >>/Search+	 >> / Tune+
 Step	 Pause / Step / Freeze
 Menu	 Menu / Home
 Return	 Back / Return
 Angle	 Info / Angle
 Up	 Up





	Original	Replacement		Original	Replacement
	Setup	Setup / OPT /		Source	AV / Input / RDS
	Left	Left		Treb-	CH- / Page-
	Enter	OK		Bass-	+ Shift + CH- /
	Right	Right		Vol-	Vol-
	Clock/Tv-Mode	Sleep / Timer			
	Down	Down			
	Title	+ Shift + Sound / Title			
	Preview	Fav / Marker / PC			
	Zoom	Zoom / Size			
	DVD/USB/Card	D.Menu / Top			
	PBC	Smart / List			
	VFD	Picture / Format			
	EQ	+ Shift + Subtitle / EQ			
	Mute	Mute / Dimmer			
	Treb+	CH+ / Page+			
	Bass+	+ Shift + CH+ /			
	Vol+	Vol+			

