



 



 















 



 





























 













Original	Replacement	Original	Replacement
 Power	 Power	 7	 7
 Open / Close	 Eject / Surround	 8	 8
 Display	 Display / Media	 9	 9
 PDVD	 Shift + 8	 0/10	 0
 DVD/USB	 Shift + 2	 10+	 Guide / EPG / -/-
 Prog	 TV/Radio /	 Menu / PBC	 Menu / Home
 Return	 Back / Return	 Up	 Up
 Subtitle	 Subtitle / EQ	 Title	 Sound / Title
 Language	 Audio / Lang I/II	 Left	 Left
 Angle	 Info / Angle	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 L/R	 D.Menu / Top
 3	 3	 Down	 Down
 Time	 Sleep / Timer	 Vol+	 Vol+
 4	 4	 N/P	 Smart / List
 5	 5	 Setup	 Setup / OPT /
 6	 6	 Zoom	 Zoom / Size



