



Original	Replacement	Original	Replacement
 Power	 Power	 Netflix	 Shift + Red / Netflix /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Source	 AV / Input / RDS
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Return	 Shift + Back / Return
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Vol+	 Vol+
 -	 Smart / List	 TV	 Info / Angle
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 YouTube	 Shift + Yellow / YouTube /	 TVG	 Guide / EPG / -/-
 Toon Goggles	 Shift + Green / APP /	 CH-	 CH- / Page-
 Foxxum	 Shift + Blue / Prime Video / Random	 I<< / TTX	 I<< / Preset-





Original		Replacement		Original		Replacement	
	<< / TTX		Text / Goto		Subpage		Eject / Surround
	Play/Pause / Timeshift		Pause / Step / Freeze		I/II Audio		Audio / Lang I/II
	Play/Pause / Timeshift		Play / Slow		Subtitle		Subtitle / EQ
	Play/Pause / Timeshift		Sleep / Timer		Index		Display / Media
	>>I / Hold		>>I / Preset+				
	>>I / Hold		Shift + Stop /				
	<< / Cancel		<< / Tune-				
	<< / Cancel		Shift + Exit / Cancel / Clear				
	Stop / Fav		Stop / Hold				
	Stop / Fav		Fav / Marker / PC				
	>> / Reveal		>> / Tune+				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Record		Rec / Rec Mode				
	Size		Zoom / Size				

