



Original	Replacement	Original	Replacement
Power Tv	Shift + Power	Rec	Rec / Rec Mode
Volume+ Tv	Vol+	Menu	Menu / Home
CH+ Tv	Shift + CH+ /	Play	Play / Slow
AV Tv	Shift + AV / Input / RDS	Up	Up
Volume- Tv	Vol-	Exit	Exit / Cancel / Clear
CH- Tv	Shift + CH- /	Left	<< / Tune-
Power VCR	Power	OK	OK
OSD/Display	Display / Media	Right	Right
Reset	Back / Return	I-Timer	Smart / List
Tracking-V-Lock	CH+ / Page+	Stop	Stop / Hold
Replay	Blue / Prime Video / Random	Down	Down
Audio	Audio / Lang I/II	Pause/Step	Pause / Step / Freeze
AV Link	AV / Input / RDS	Prog/Check	TV/Radio /
Tracking-V-Lock Down	CH- / Page-	Cancel	Shift + Exit / Cancel / Clear
Search	Red / Netflix / Search	SP/LP/EP	Picture / Format
I<< Index	I<< / Preset-		
Index >>I	>>I / Preset+		



