






 
 



















Original	Replacement
	 Power
	 Mute / Dimmer
	 Audio / Lang I/II
	 Shift + Picture / Format
	 Picture / Format
	 Sound / Title
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0

Original	Replacement
	 Back / Return
	 Display / Media
	 Shift + Pause / Step /
	 Shift + Text /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 AV / Input / RDS
	 Up
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Exit / Cancel / Clear





Original	Replacement
 CH+ / Page+	 CH+ / Page+
 Media	 Shift + Display / Media
 Vol+	 Vol+
 CH- / Page-	 CH- / Page-
 Text	 Text / Goto
 Vol-	 Vol-
 Hold	 Shift + Stop /
 Reveal	 Setup / OPT /
 Size	 Zoom / Size
 Index	 Smart / List
 S.Title	 Subtitle / EQ
 S.Page	 Eject / Surround
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 FAV	 Fav / Marker / PC
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

