 

 



 

 

 

 

 

 

 

 

 

 

 











Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 Display	 Display / Media
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Marker	 Fav / Marker / PC
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+

Original	Replacement
 << Slow/Search	 << / Tune-
 Slow/Search >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Group	 Text / Goto
 0	 0
 >=10	 Guide / EPG / -/-





Original	Replacement	Original	Replacement
 Cancel	 Exit / Cancel / Clear		
 Repeat Mode	 Green / APP / Repeat		
 A-B Repeat	 Yellow / YouTube / Repeat		
 Play Mode	 Picture / Format		
 Setup	 Setup / OPT /		
 V.S.S.	 Smart / List		
 Audio Only	 Sound / Title		
 Index Skip-	 Shift + 1<< / Preset-		
 Index Skip+	 Shift + >>1 / Preset+		
 Page-	 CH- / Page-		
 Page+	 CH+ / Page+		
 Time Search	 Red / Netflix / Search		
 Time Mode	 Sleep / Timer		
 Amp Vol-	 Vol-		
 AMP Vol+	 Vol+		

