



Original	Replacement	Original	Replacement
 Power	 Power	 Netflix	 Shift + Red / Netflix /
 Input	 AV / Input / RDS	 Q.Menu	 D.Menu / Top
 1	 1	 Up	 Up
 2	 2	 Menu	 Menu / Home
 3	 3	 Left	 Left
 4	 4	 OK/List	 OK
 5	 5	 Right	 Right
 6	 6	 Back	 Back / Return
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Red	 Red / Netflix / Search
 Info	 Info / Angle	 Green	 Green / APP / Repeat
 0	 0	 Yellow	 Yellow / YouTube / Repeat
 Recall	 Fav / Marker / PC	 Blue	 Blue / Prime Video / Random
 prime video	 Shift + Blue / Prime	 Vol+	 Vol+
 Home	 Shift + Menu /	 CH+	 CH+ / Page+
 YouTube	 Shift + Yellow / YouTube / Repeat	 Mute	 Mute / Dimmer

Original	Replacement	Original	Replacement
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			



