 

 

 



 

 





Original	Replacement	Original	Replacement
	Power		CH+ / Page+
	Dtv/Vcr		Green / APP / Repeat
	1		>> / Tune+
	2		Left
	3		Vol-
	4		OK
	5		Right
	6		Vol+
	7		Yellow / YouTube / Repeat
	8		Down
	9		Ch- / Page-
	Menu		Blue / Prime Video / Random
	0		Mute / Dimmer
	Exit		Pause / Step / Freeze
	Red / Netflix / Search		Fav / Marker / PC
	<< / Tune-		Recall
	Up		Lang
			Shift + LANG I/II / Audio / Lang I/II





Original	Replacement
 Info	 Info / Angle
 Epg	 Guide / EPG / -/--
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 TTX	 Text / Goto
 Subtitle	 Subtitle / EQ

Original	Replacement

