





Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 N/P	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 Video	 Shift + 4
 4	 4
 5	 5
 6	 6
 Intro	 AV / Input / RDS
 7	 7
 8	 8
 9	 9
 Default	 Smart / List
 Goto	 Text / Goto
 0	 0

Original	Replacement
 10+	 Guide / EPG / -/--
 Karaoke	 TV/Radio /
 Zoom	 Zoom / Size
 Menu/PBC	 Menu / Home
 Setup	 Setup / OPT /
 3D	 Picture / Format
 Up	 Up
 Left/Echo-	 Left
 Enter	 OK
 Right/Eco+	 Right
 Down	 Down
 Title	 Sound / Title
 OSD	 Display / Media
 Prog	 Shift + TV/Radio / Program
 Clear	 Exit / Cancel / Clear
 Mark	 Fav / Marker / PC
 >>	 >> / Tune+





Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Land/L/R	 Audio / Lang I/II
 Angle	 Info / Angle
 Sub-T	 Subtitle / EQ
 Vol+	 Vol+
 Return	 Back / Return
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Vol-	 Vol-
 Step	 Shift + Pause / Step /
 Slow	 Shift + Play /
 Random	 Blue / Prime Video / Random

Original	Replacement
 Mute	 Mute / Dimmer

