 








 







Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <</Rev	 << / Tune-
 >>/Fwd	 >> / Tune+
 I<</Prev	 I<< / Preset-
 >>I/Next	 >>I / Preset+
 Title	 Sound / Title
 Language	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Mode	 Picture / Format
 Zoom	 Zoom / Size
 Time	 Sleep / Timer
 Prog	 TV/Radio /

Original	Replacement
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 N/P	 Smart / List
 Vol-	 Vol-
 Display	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4



Program



Original	Replacement	Original	Replacement
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
10+	10+	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - SAT 0	0
RESUME	Resume	NETFLIX SEARCH	Red / Netflix / Search
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
L/R	L/R	Prime Video RANDOM	Blue / Prime Video / Random
SLOW	Slow	SHIFT + SLOW	Shift + Play /
STEP	Step	SHIFT + STEP - FREEZE	Shift + Pause / Step /

Original	Replacement	Original	Replacement

