




Original	Replacement
	 Power
	 Back / Return
	 Menu / Home
	 Up
	 Shift + Down
	 Left
	 OK
	 Right
	 Shift + Up
	 TV/Radio /
	 Down
	 Display / Media
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+

Original	Replacement
	 AV / Input / RDS
	 CH+ / Page+
	 Vol-
	 Setup / OPT /
	 CH- / Page-
	 Mute / Dimmer





 








 
Original	Replacement	Original	Replacement
Power	Power	Yellow	Yellow / YouTube / Repeat
Recent	Shift + Guide / EPG / -/-	Green	Green / APP / Repeat
TV / PC	Shift + Fav / Marker / PC	Red	Red / Netflix / Search
My APPS	Display / Media	AD	Audio / Lang I/II
AV Mode	Shift + AV / Input / RDS	Search	Shift + Red / Netflix /
T.Opt	Shift + Setup / OPT / Tools	App	Shift + Green / APP /
Q.View	Eject / Surround	TV / Radio	TV/Radio /
Energy Saving	Sleep / Timer	Guide	Guide / EPG / -/-
Live Zoom	Shift + Zoom /	Info	Info / Angle
Live Menu	Shift + Menu /	Input	AV / Input / RDS
3D	Zoom / Size	List	Smart / List
AD / PIP	Sound / Title	1	1
>>	>>I / Preset+	2	2
<<	I<< / Preset-	3	3
Home / Smart	Menu / Home	4	4
Stop / Live TV	Stop / Hold	5	5
Blue	Blue / Prime Video / Random	6	6

Original	Replacement	Original	Replacement
Power	Power	Yellow	Yellow / YouTube / Repeat
Recent	Shift + Guide / EPG / -/-	Green	Green / APP / Repeat
TV / PC	Shift + Fav / Marker / PC	Red	Red / Netflix / Search
My APPS	Display / Media	AD	Audio / Lang I/II
AV Mode	Shift + AV / Input / RDS	Search	Shift + Red / Netflix /
T.Opt	Shift + Setup / OPT / Tools	App	Shift + Green / APP /
Q.View	Eject / Surround	TV / Radio	TV/Radio /
Energy Saving	Sleep / Timer	Guide	Guide / EPG / -/-
Live Zoom	Shift + Zoom /	Info	Info / Angle
Live Menu	Shift + Menu /	Input	AV / Input / RDS
3D	Zoom / Size	List	Smart / List
AD / PIP	Sound / Title	1	1
>>	>>I / Preset+	2	2
<<	I<< / Preset-	3	3
Home / Smart	Menu / Home	4	4
Stop / Live TV	Stop / Hold	5	5
Blue	Blue / Prime Video / Random	6	6





Original	Replacement	Original	Replacement
7		7	
8		8	
9		9	
0		0	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Back		Back / Return	
Vol +		Vol+	
Vol -		Vol-	
Mute		Mute / Dimmer	
P +		CH+ / Page+	
P -		CH- / Page-	
Ratio		Picture / Format	
Q.Menu		D.Menu / Top	

Original	Replacement	Original	Replacement
Subtitle		Subtitle / EQ	
Settings		Setup / OPT /	
>>		>> / Tune+	
Play		Play / Slow	
<<		<< / Tune-	
Rec		Rec / Rec Mode	
Pause		Pause / Step / Freeze	
Text		Text / Goto	
FAV		Fav / Marker / PC	
Exit		Exit / Cancel / Clear	

