























































 






 








 

 

 





Original	Replacement	Original	Replacement
 PP	 Back / Return	 P+	 CH+ / Page+
 Mute	 Mute / Dimmer	 -/--	 Guide / EPG / -/--
 (I)	 OK	 0	 0
 Power	 Power	 P<P	 Fav / Marker / PC
 [ ]	 Display / Media	 P-	 CH- / Page-
 [=]	 Text / Goto	 Vol-	 Vol-
 [↔]	 AV / Input / RDS	 Vol+	 Vol+
 [ + ]	 Smart / List	 Colour+	 Right
 1	 1	 Brighness-	 Down
 2	 2	 Colour-	 Left
 3	 3	 Brighness+	 Up
 4	 4	 ●	 Setup / OPT /
 5	 5	 □	 Stop / Hold
 6	 6	 X	 Exit / Cancel / Clear
 7	 7	 [ ? ]	 D.Menu / Top
 8	 8	 ◆	 Zoom / Size
 9	 9	 [ / = ]	 Sleep / Timer



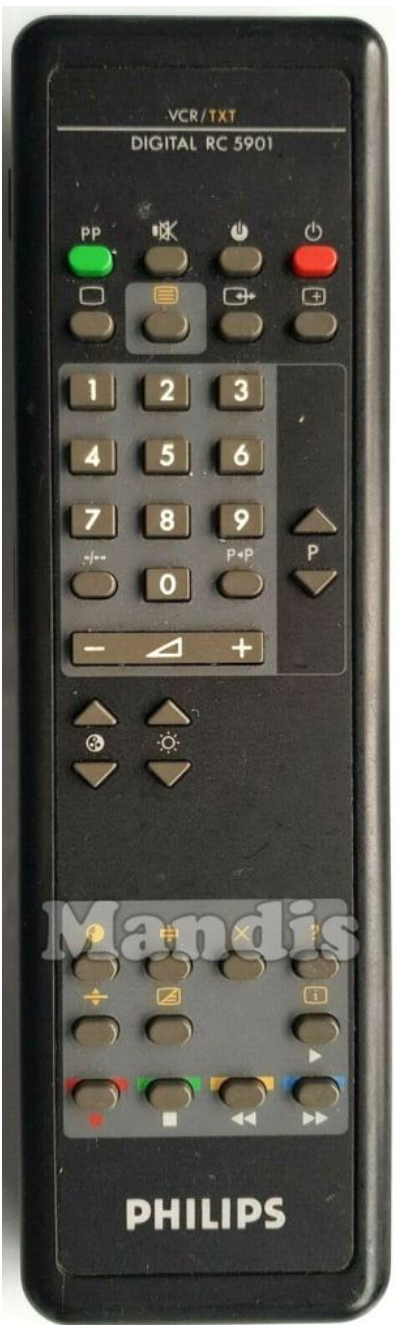





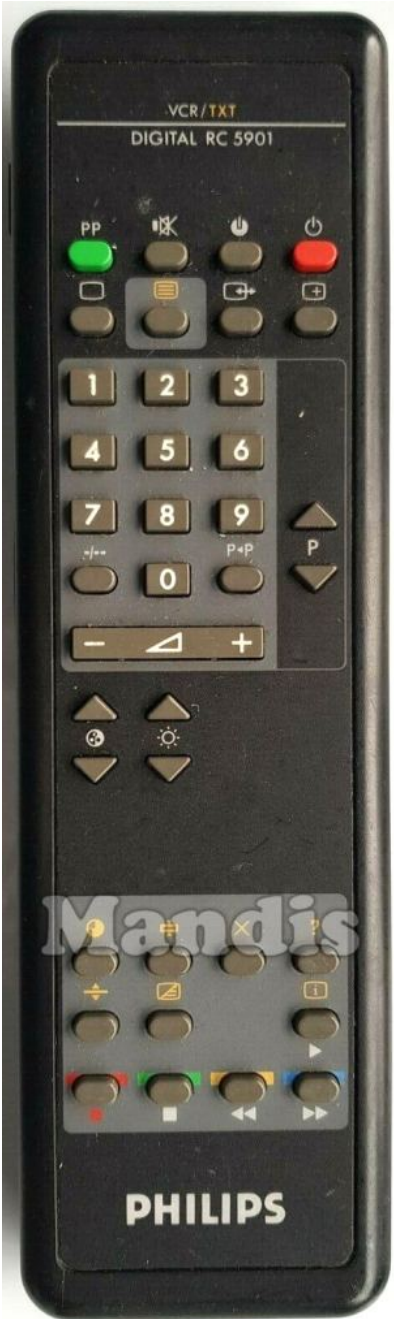































































Original	Replacement	Original	Replacement
	 Info / Angle		
	 Red / Netflix / Search		
	 Green / APP / Repeat		
	 Yellow / YouTube / Repeat		
	 Blue / Prime Video / Random		







Original	Replacement	Original	Replacement
	PP		Back / Return
	Mute		Mute / Dimmer
	(I)		OK
	Power		Power
	[ ]		Display / Media
	[↔]		AV / Input / RDS
	[+]		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P+		CH+ / Page+
	-/--		Guide / EPG / -/--
	0		0
	P<P		Fav / Marker / PC
	P-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	●		Setup / OPT /
	□		TV/Radio /
	X		Exit / Cancel / Clear
	?		D.Menu / Top
	Size		Zoom / Size
	[=]		Text / Goto
	[ /= ]		Sleep / Timer
	Play		Play / Slow
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-





Original		Replacement		Original		Replacement	
	>>		>> / Tune+				

