












 



































 






















 
 







 








 








Original	Replacement	Original	Replacement
 Power	 Power	 Dev.List	 Display / Media
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Text	 Text / Goto
 3	 3	 Auto	 Setup / OPT /
 Lang	 Audio / Lang I/II	 Menu	 Menu / Home
 4	 4	 Zoom	 Zoom / Size
 5	 5	 Info	 Info / Angle
 6	 6	 Exit	 Exit / Cancel / Clear
 Game	 Picture / Format	 Up	 Up
 7	 7	 CH+	 CH+ / Page+
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol-
 Tv/Radio	 TV/Radio /	 Enter	 OK
 FAV	 Fav / Marker / PC	 Right	 Right
 0	 0	 Vol+	 Vol+
 Recall	 Back / Return	 CH-	 CH- / Page-

Original	Replacement	Original	Replacement
 Power	 Mute / Dimmer	 Shift	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 PICTURE	 OPT-TOOLS	 GOTO	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 MENU	 OK	 RETURN	 BACK
 CLEAR	 EXIT	 CANCEL	 LIST
 EXIT	 SMART	 MEDIA	 CH PAGE
 CANCEL	 DISPLAY	 TV	 DVD
 VOL +	 CH PAGE	 CD - STB	 VIDEO
 VOL -	 1	 2	 TAPE
 TV	 3	 4	 TUNER
 DVD	 5	 6	 AUX - HDD
 CD - STB	 7	 8	 USB
 VIDEO	 9	 0	 BLUETOOTH
 TAPE	 GUIDE EPG	 HDMI - SAT	 PC
 TUNER	 NETFLIX	 APP	 YouTube
 AUX - HDD	 SEARCH	 REPEAT	 REPEAT A-B
USB	RANDOM	FAV MARKER	
BLUETOOTH	Mandis SHOP	www.mandis.tv	





Original	Replacement
	Down
	Smart / List
	Rec / Rec Mode
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Replacement

