



Original	Replacement	Original	Replacement
Title Del	Shift + 1	TV Channel-	Shift + CH- /
Level Meter	Shift + 2	7	7
Motion Sensor	Shift + 3	8	8
Power Audio	Power	9	9
Display Chara	Shift + 4	Karaoke Setting	Smart / List
Eco Dimmer	Shift + Mute / Dimmer	10	Guide / EPG / -/-
Tv/Video	TV/Radio /	Sleep	Sleep / Timer
Power Tv	Shift + Power	0	0
1	1	A.STBY	Shift + 0
2	2	+10	Fav / Marker / PC
3	3	Clock/Timer	Shift + Sleep / Timer
MIC Vol+	Shift + Up	Mic Mix	Shift + Smart / List
TV Channel+	Shift + CH+ /	Karaoke Scoring	Shift + AV / Input / RDS
4	4	Reserve	Shift + Green / APP /
5	5	Vocal Masking	Shift + Red / Netflix /
6	6	Vocal Support	Shift + Subtitle / EQ
MIC Vol-	Shift + Down	Top Menu/PG	D.Menu / Top





Original	Replacement
Menu/PL	Menu / Home
Cancel	Exit / Cancel / Clear
Audio Vol+	Vol+
Tv Vol+	Shift + Right
Up	Up
Left	Left
Enter/Set	OK
Right	Right
Down	Down
Audio Vol-	Vol-
Tv Vol-	Shift + Left
On Screen	Display / Media
Set Up	Setup / OPT /
Fade Muting	Mute / Dimmer
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Replacement
Back/Tuner/Play Mode	Back / Return
Return	Shift + Back / Return
I<<	I<< / Preset-
I<< Group Title Skip	Shift + I<< / Preset-
>>I	>>I / Preset+
Group Title Skip >>I	Shift + >>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Group Title >>	Shift + >> /
Play/Pause	Red / Netflix / Search
Play/Pause USB	Shift + Play /
FM Tuner	Shift + 6
Tuner AM	Blue / Prime Video / Random
Audio/MPX	Audio / Lang I/II
Subtitle	Subtitle / EQ
Zoom	Zoom / Size
Angle	Info / Angle



