



Original	Replacement
	Power
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Text / Goto
	0
	Fav / Marker / PC
	Vol+
	Mute / Dimmer
	CH+ / Page+

Original	Replacement
	Vol-
	Guide / EPG / -/-
	CH- / Page-
	Shift + Red / Netflix /
	Menu / Home
	Shift + Blue / Prime
	TV/Radio /
	Up
	Picture / Format
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat



