 




| Original  | Replacement   |
|---|---|
|    |  Power   |
|    |  AV / Input / RDS  |
|    |  +  Shift + 8                   |
|    |  TV/Radio /  |
|    |  Eject / Surround  |
|    |  +  Shift + Setup / OPT / Tools |
|    |  OK  |
|    |  Exit / Cancel / Clear   |
|    |  Green / APP / Repeat  |
|    |  D.Menu / Top  |
|    |  Setup / OPT /   |
|    |  Up  |
|  |  Left  |
|  |  +  Shift + OK              |
|  |  Right   |
|  |  Down  |
|  |  Back / Return   |

| Original  | Replacement   |
|---|---|
|    |  Display / Media       |
|    |  << / Tune-            |
|    |  Play / Slow           |
|    |  Pause / Step / Freeze |
|    |  >> / Tune+            |
|    |  I<< / Preset-         |
|    |  >>I / Preset+         |
|    |  Rec / Rec Mode        |
|    |  Stop / Hold           |
|    |  Vol+                  |
|    |  Mute / Dimmer         |
|    |  CH+ / Page+           |
|   |  Vol-                 |
|  |  CH- / Page-         |
|  |  1                   |
|  |  0                   |
|  |  3                   |



