



 




















 

 











 


Original	Replacement
	Power
	Input
	Disney+
	YouTube
	prime video
	DAZN
	Rakuten Tv
	pluto tv
	FIFA+
	Netflix
	VIDAA tv
	Rai Play
	Red
	Green
	Yellow

Original	Replacement
	Blue
	[=]
	Up
	Play
	Pause
	Left
	OK
	Right
	Back
	Down
	Exit
	Vol+
	Home
	CH+
	Vol-
	Micro
	CH-





Original	Replacement	Original	Replacement
 Subtitle	 Subtitle / EQ		
 Mute	 Mute / Dimmer		
 Text	 Text / Goto		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Guide	 Guide / EPG / -/--		
 0	 0		
 CH.List	 Smart / List		

Original	Replacement	Original	Replacement

