


Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 Step	 Shift + Pause / Step /
 4	 4
 5	 5
 6	 6
 DVD/USB	 AV / Input / RDS
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 0/10	 0
 10+	 Guide / EPG / -/--

Original	Replacement
 Time	 Sleep / Timer
 Title	 Sound / Title
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Zoom	 Zoom / Size
 I<<	 I<< / Preset-
 L/R	 Red / Netflix / Search
 N/P	 Blue / Prime Video / Random
 <<	 << / Tune-
 Vol-	 Vol-
 Vol+	 Vol+
 >>I	 >>I / Preset+

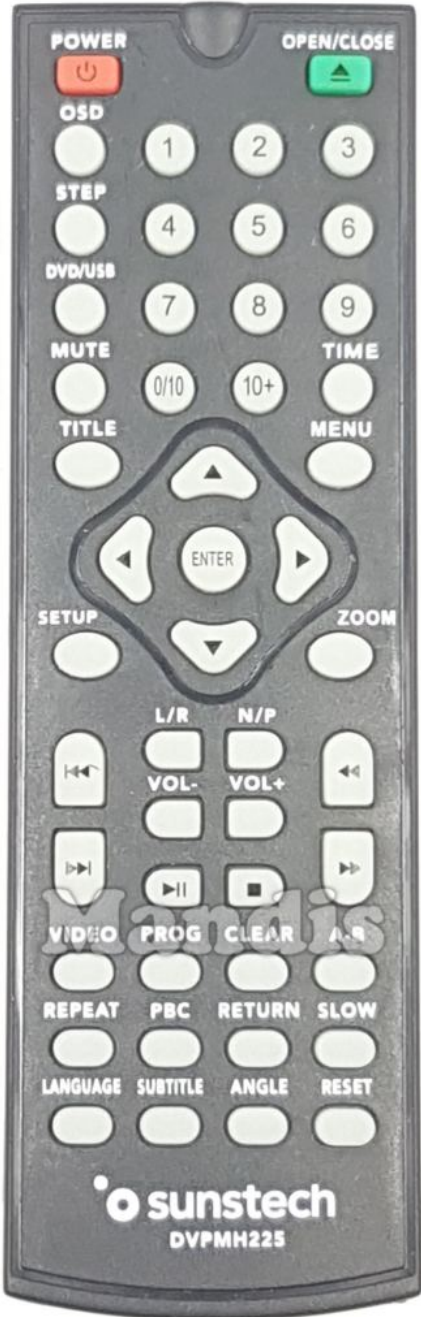



Original	Replacement
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	>> / Tune+
	+ Shift + 4
	TV/Radio /
	Exit / Cancel / Clear
	Yellow / YouTube / Repeat
	Green / APP / Repeat
	Text / Goto
	Back / Return
	+ Shift + Play /
	Audio / Lang I/II
	Subtitle / EQ
	Info / Angle
	+ Shift + Exit / Cancel / Clear

Original	Replacement

