









 
















 




















 























| Original | Replacement |
|--|---|
|  Power |  Power |
|  Sub-T |  Subtitle / EQ |
|  Lang |  Audio / Lang I/II |
|  Mute |  Mute / Dimmer |
|  EPG |  Guide / EPG / -/-- |
|  Goto |  Shift + Text / |
|  Page+ |  CH+ / Page+ |
|  TTX |  Text / Goto |
|  Repeat |  Shift + Green / APP / |
|  Page- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Up/CH+ |  Up |
|  Exit |  Exit / Cancel / Clear |
|  Vol- |  Vol- |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |

| Original | Replacement |
|--|---|
|  Vol+ |  Vol+ |
|  FAV |  Fav / Marker / PC |
|  Down/CH- |  Down |
|  Tv/Radio |  TV/Radio / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Recall |  Back / Return |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Info |  Info / Angle |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  << |  << / Tune- |





| Original | Replacement |
|--|---|
|  Power |  Power |
|  Sub-T |  Subtitle / EQ |
|  Lang |  Audio / Lang I/II |
|  Mute |  Mute / Dimmer |
|  EPG |  Guide / EPG / -/-- |
|  Goto |  Shift + Text / |
|  Page+ |  CH+ / Page+ |
|  TTX |  Text / Goto |
|  Repeat |  Shift + Green / APP / |
|  Page- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Up/CH+ |  Up |
|  Exit |  Exit / Cancel / Clear |
|  Left |  Left |
|  Vol- |  Vol- |
|  OK |  OK |
|  Right |  Right |

| Original | Replacement |
|--|---|
|  Vol+ |  Vol+ |
|  FAV |  Fav / Marker / PC |
|  Down/CH- |  Down |
|  Tv/Radio |  TV/Radio / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Recall |  Back / Return |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Info |  Info / Angle |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  << |  << / Tune- |



