































 





















Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Off	 Exit / Cancel / Clear
Tone-	 << / Tune-	Menu Down	 Down
Tone+	 >> / Tune+	Back	 Back / Return
Menu audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Update	 Smart / List
Surround	 Eject / Surround	Chan.Up	 CH+ / Page+
Txt Expand	 Zoom / Size	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Display	 Display / Media
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top	1	 1
Text	 Text / Goto	2	 2
Menu	 Menu / Home	3	 3
Menu Up	 Up	4	 4
Info	 Info / Angle	5	 5
Menu Left	 Left	6	 6
OK Enter	 OK	7	 7



Original	Replacement	Original	Replacement
8	 8		
9	 9		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Nicam/Mono	 +  Shift + Audio / Lang I/II		
Level L	 +  Shift + Left		
Level R/Woofer	 +  Shift + Right		
Audio+	 +  Shift + Vol+		
Audio-	 +  Shift + Vol-		

