

Original	Replacement	Original	Replacement
Power ON/Off	 Power	Woofer/Speed	 Right
CD Play	 Play / Slow	Volume+	 Vol+
CD Pause	 Pause / Step / Freeze	Funct./Direct	 Smart / List
Stop	 Stop / Hold	Vol Rs+/S.Mode	 CH+ / Page+
CD Rewind	 << / Tune-	Volume-	 Vol-
CD F.FWD	 >> / Tune+	Display	 Display / Media
Prev./Prog-	 I<< / Preset-	Vol Rs-/Effect	 CH- / Page-
Next/Prog+	 >>I / Preset+	Pr 1	 1
Tape 2 Pre./eq	 Subtitle / EQ	Pr 2	 2
Tape 1 Hall/Ats	 Eject / Surround	Pr 3	 3
Sleep	 Sleep / Timer	Pr 4	 4
Program	 TV/Radio /	Pr 5	 5
CD/Theater	 Setup / OPT /	Pr 6	 6
Input/Source	 AV / Input / RDS	Repeat	 Green / APP / Repeat
Mode	 Menu / Home	CD Random	 Blue / Prime Video / Random
Tape 1 Preset	 Up	Tape 1 Play	 Shift + Play /
Preset Pause	 OK	Tape 1 Stop	 Shift + Stop /

Hold



The image shows a black Mandis remote control with a variety of buttons. At the top, there is a power button (red circle with a power symbol), a DIMMER MUTE button (black with white text), and a SHIFT button (yellow circle with black text). Below these are four function buttons: TV, DVD, SAT, and AUX. The main section of the remote contains numerous buttons for media control, including play, pause, stop, first, previous, next, last, and a central OK button with directional arrows. There are also buttons for volume, channel, and a numeric keypad. At the bottom, there are four colored buttons for Netflix, App, YouTube, and Prime Video, followed by search, repeat, and random buttons. The Mandis logo and website address are printed at the very bottom.