





 







 
 
 

 
 
 

 

 

 
 










 




 



 

 
















Original	Replacement	Original	Replacement
	Power		Power
	TV System		Menu
	Display		Info
	Audio		Dual
	Subtitle		Subt
	Recall		Pre Ch
	A-B		Shift + Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Timeshift		Format
	Rec		Rec
	Sel Favor / Vol +		Vol +
	Load Favor / Vol -		Vol -
	Source		AV
	Edit		3D
	EPG		Guide
	TV / MHR		Shift + TV/R
	DTV		TV/R
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Left		Left
	Enter		Ok
	Right		Right





Original	Replacement	Original	Replacement
	 Back	 Timer Rec	 Shift + AV
	 Smart	 Zoom	 Eject
	 List	 HDD	 Media
	 Play	 USB	 Shift + Media
	 Stop	 LAN	 Options
	 Pause		
	 Shift + Left		
	 Shift + Right		
	 Red		
	 <<<		
	 Green		
	 >>>		
	 Yellow		
	 I<<<		
	 Blue		
	 >>>I		
	 Mute		

