





 
 

 

 

 


 


 

 






 



 



 

















 



 








 

Original	Replacement
 Power	 Power
 DTV/ATV	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Aspect	 Zoom / Size

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 V+	 Vol+
 V-	 Vol-
 Mute	 Mute / Dimmer
 MTS	 Eject / Surround
 Timer	 Sleep / Timer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Replacement
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Text / Goto
	Subtitle / EQ
	DTV/Radio/Repeat
	TV/Radio /
	List
	Fav / Marker / PC
	Guide / EPG / -/--
	Rec / Rec Mode

Original	Replacement
	Rec Menu
	T-Shift
	Still
	TOP MENU D.MENU
	D.Menu / Top
	OPT-TOOLS SETUP
	Setup / OPT /
	LANG I/II AUDIO
	Audio / Lang I/II

