



Original		Replacement		Original		Replacement	
	Standby / On		Power		Zoom		Shift + Eject
	Open / Close		Eject		Add / Clear		Exit
	PS/IS		Red		Navigation		List
	Scan		Green		Menu		Menu
	Mute		Mute		Finalize		Yellow
	1		1		Timer		Shift + AV
	2		2		Up		Up
	3		3		Left		Left
	4		4		Select		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Edit		Blue
	8		8		Quality		3D
	9		9		Audio		Dual
	0		0		Disc Oper		Smart
	Display		Info		Erase		Shift + Back
	Goto		Guide		Angle		Format



