





 
 





 








 

 





 


 



 








 






	Original	Replacement		Original	Replacement
	 Power	 Power		 Exit	 Exit / Cancel / Clear
	 Mute	 Mute / Dimmer		 Up/FAV+	 Up
	 1	 1		 Down/FAV-	 Down
	 2	 2		 Left	 Left
	 3	 3		 Right	 Right
	 4	 4		 Enter	 OK
	 5	 5		 CH+	 CH+ / Page+
	 6	 6		 CH-	 CH- / Page-
	 7	 7		 Display	 Display / Media
	 8	 8		 Open/Close/Smart	 Eject / Surround
	 9	 9		 VOL+	 Vol+
	 0	 0		 Vol-	 Vol-
	 FAV	 Fav / Marker / PC		 USB/Media	 Shift + Display / Media
	 Recall	 Back / Return		 Play/Pause/Text	 Play / Slow
	 Menu	 Menu / Home		 Stop/Index	 Stop / Hold
	 Source	 AV / Input / RDS		 Rec/Media2	 Rec / Rec Mode
	 EPG	 Guide / EPG / -/--		 I<</Hold	 I<< / Preset-



