 

 







 




 
 
 

 

 
 
 
 
 




 



 

 
 
 



 
 

 
 



 
 


 



 
 


 

 
 
 



 


 

 
 
 



 
 


 
 


 

 

 


 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Last CH/Delete	 Pre Ch
 -/--	 Guide
 AV	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 TV	 TV/R
 Play	 Play
 Text	 Text
 Pause	 Pause
 Hold	 Options
 >>	 >>
 Mix	 Sleep





Original		Replacement		Original		Replacement	
	Power		Power		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Menu		Menu
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Red		Red
	9		9		Green		Green
	0		0		Yellow		Yellow
	Last CH/Delecte		Pre Ch		Blue		Blue
	--/--		Guide		<<		<<
	AV		AV		>>		>>
	Vol+		Vol +		Play		Play
	Vol-		Vol -		Stop		Stop
	Mute		Mute		TV		TV/R





	Original	Replacement		Original	Replacement
	Text	 Text			
	Pause	 Pause			
	Hold	 Options			
	Mix	 Sleep			
	Record	 Rec			
	Pg Up	 Shift + Up			
	Pg Down	 Shift + Down			
	Refresh	 Back			
	Pg Back	 Shift + Left			
	Pg Fwd	 Shift + Right			
	Home	 Smart			

