 
















 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info
 DTV/VCR	 Smart	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 CH+	 Ch +
 8	 8	 CH-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 Pre Ch	 Text	 Text
 Recall	 Back	 Pause	 Pause
 Audio	 Dual	 Red	 Red
 Subtitle	 Subt	 Green	 Green





Original	Replacement	Original	Replacement
TV/RADIO (Yellow)	C (Yellow)		
(Blue)	D (Blue)		
TV/RADIO (Yellow)	SEARCH TV/R		

