

















 

 



 

 







 

 

 













 














 







 

 



 
 



 







Original	Replacement
 Power	 Power
 Video	 Shift + 4
 Video	 << / Tune-
 Scart	 Setup / OPT /
 Scart	 >> / Tune+
 PC	 Fav / Marker / PC
 PC	 I<< / Preset-
 TV	 TV/Radio /
 TV	 >>I / Preset+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 PRE PR	 Back / Return
 Source	 AV / Input / RDS
 Aspect	 Shift + Picture / Format
 Dual	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 Picture	 Picture / Format
 PR List	 Smart / List
 Sound	 Sound / Title
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 P-	 CH- / Page-





Original	Replacement
	 Menu / Home
	 Exit / Cancel / Clear
	 Up
	 Left
	 OK
	 Right
	 Down
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Shift + Text /
	 Zoom / Size
	 Eject / Surround
	 Info / Angle
	 Subtitle / EQ

Original	Replacement
	 Stop / Hold
	 D.Menu / Top

