





 
 

 


 


 
 
 
 
 



 
 

 
 


 
 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 Aide	 Smart
 1	 1	 CH -	 Ch -
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Right	 Right
 6	 6	 Retour	 Back
 7	 7	 Down	 Down
 8	 8	 Menu	 Menu
 9	 9	 <<	 <<
 <->	 Exit	 Play / Pause	 Play
 0	 0	 Play / Pause	 Pause
 Recall	 Pre Ch	 Stop	 Stop
 Vol +	 Vol +	 >>	 >>
 Info	 Info	 Red	 Red
 CH +	 Ch +	 Green	 Green



