







Original		Replacement		Original		Replacement	
	POWER		Power		INFO		Info
	MUTE		Mute		TV/RADIO		TV/R
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		LCD MENU		Menu
	4		4		DVB MENU		D. Menu
	5		5		Up		Up
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Enter		Ok
	0		0		INPUT		AV
	-/-		Guide		PMODE		Shift + Format
	Recall		Back		SMODE		Dual
	VOL+		Vol +		SLEEP		Sleep
	VOL-		Vol -		LIST		List
	NICAM		Smart		FAV		Pre Ch





	Original	Replacement		Original	Replacement
	 PAGE-	 <<			
	 PAGE+	 >>			
	 TEXT	 Text			
	 HOLD	 Options			
	 EXIT	 Exit			
	 EPG	 Shift + Guide			
	 INDEX	 3D			
	 SUBTITLE	 Subt			
	 SIZE	 Format			
	 REVEAL	 Media			
	 RED	 Red			
	 GREEN/AUDIO	 Green			
	 YELLOW/PAUSE	 Yellow			
	 BLUE	 Blue			

