



| Original  | Replacement   |
|---|---|
|  Standby           |  Power                       |
|  Source            |  AV / Input / RDS            |
|  Red               |  Red / Netflix / Search      |
|  Green             |  Green / APP / Repeat        |
|  Yellow            |  Yellow / YouTube / Repeat   |
|  Blue              |  Blue / Prime Video / Random |
|  P.Mode            |  Picture / Format            |
|  S.Mode            |  Sound / Title               |
|  Freeze            |  Pause / Step / Freeze       |
|  Txt               |  Text / Goto                 |
|  Mix / Fav. List  |  Fav / Marker / PC          |
|  Size / Subtitle |  Subtitle / EQ             |
|  Cancel / Audio  |  Audio / Lang I/II         |
|  Zoom            |  Zoom / Size               |
|  << / Index      |  << / Tune-                |
|  >> / Hold       |  >> / Tune+                |
|  I<< / Reveal    |  I<< / Preset-             |

| Original  | Replacement   |
|---|---|
|  >>I / Subpage |  >>I / Preset+         |
|  Menu          |  Menu / Home           |
|  Exit          |  Exit / Cancel / Clear |
|  Up            |  Up                    |
|  Left          |  Left                  |
|  Enter         |  OK                    |
|  Right         |  Right                 |
|  Play / Pause  |  Play / Slow           |
|  Down          |  Down                  |
|  Stop          |  Stop / Hold           |
|  Vol +        |  Vol+                 |
|  Mute        |  Mute / Dimmer       |
|  CH +        |  CH+ / Page+         |
|  Vol -       |  Vol-                |
|  TV / Radio  |  TV/Radio /          |
|  CH -        |  CH- / Page-         |
|  1           |  1                   |



