

 

 

 







 



 










 






 


Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Open/Close	 Eject / Surround
 Setup	 Setup / OPT /
 N/P	 Picture / Format
 DVD/DVB/Card	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 10+	 Guide / EPG / -/-

Original	Replacement
 Display	 Display / Media
 PBC	 Smart / List
 Title	 Sound / Title
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Search	 Shift + Red / Netflix /
 Mark	 Fav / Marker / PC
 Program	 Shift + TV/Radio / Program
 Zoom	 Zoom / Size
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Vol+	 Vol+





	Original	Replacement	Original	Replacement
	 I<<	 I<< / Preset-		
	 >>I	 >>I / Preset+		
	 Vol-	 Vol-		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		
	 Audio	 Audio / Lang I/II		
	 Subtitle	 Subtitle / EQ		
	 Angle/Scan	 Info / Angle		
	 Tv/Radio/A-B	 TV/Radio /		
	 TTX/3D	 Text / Goto		
	 Red/FAV/Step	 Red / Netflix / Search		
	 Green/Del/Slow	 Green / APP / Repeat		
	 Yellow/Pro/V-Mod	 Yellow / YouTube / Repeat		
	 Blue/EPG/Repea	 Blue / Prime Video / Random		
	A1	 +  Shift + 1		
	A2	 +  Shift + 2		
	A3	 +  Shift + 3		

