 

 



 

 

 

 

 

 

 

 

 
 

 


 









Original	Replacement
 Standby	 Power
 Auto	 Smart / List
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Aspect	 Shift + Picture / Format

Original	Replacement
 Audio	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 FAV	 Fav / Marker / PC





Original	Replacement
 FAV-	 Shift + CH- /
 FAV+	 Shift + CH+ /
 EPG	 Guide / EPG / -/--
 Text	 Text / Goto
 Hold	 Shift + Stop /
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Size	 Zoom / Size
 Reveal	 Setup / OPT /
 Subpage	 Eject / Surround
 Media	 Shift + Display / Media
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 Rec	 Rec / Rec Mode

Original	Replacement
 Stop	 Stop / Hold
 I<<<	 I<<< / Preset-
 >>>I	 >>>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

