



Original	Replacement
Power	Power
Sub-T	Subtitle / EQ
Lang	Audio / Lang I/II
Mute	Mute / Dimmer
EPG	Guide / EPG / -/--
Goto	Shift + Text /
Page+	CH+ / Page+
TTX	Text / Goto
Repeat	Shift + Green / APP /
Page-	CH- / Page-
Menu	Menu / Home
Up/CH+	Up
Exit	Exit / Cancel / Clear
Vol-	Vol-
Left	Left
OK	OK
Right	Right

Original	Replacement
Vol+	Vol+
FAV	Fav / Marker / PC
Down/CH-	Down
Tv/Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Info	Info / Angle
7	7
8	8
9	9
0	0
<<	<< / Tune-





Original	Replacement	Original	Replacement
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 >>	 >> / Preset+		
 Play	 Play / Slow		
 Pause/Time Shift	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Rec	 Rec / Rec Mode		
 Red/PVR	 Red / Netflix / Search		
 Green/V-Format	 Green / APP / Repeat		
 Yellow/Aspect	 Yellow / YouTube / Repeat		
 Blue/Timer	 Blue / Prime Video / Random		

Original	Replacement	Original	Replacement

