














 



 

 

 

 

 


 
 



 

 



 



 
 
 

 

 

 










 



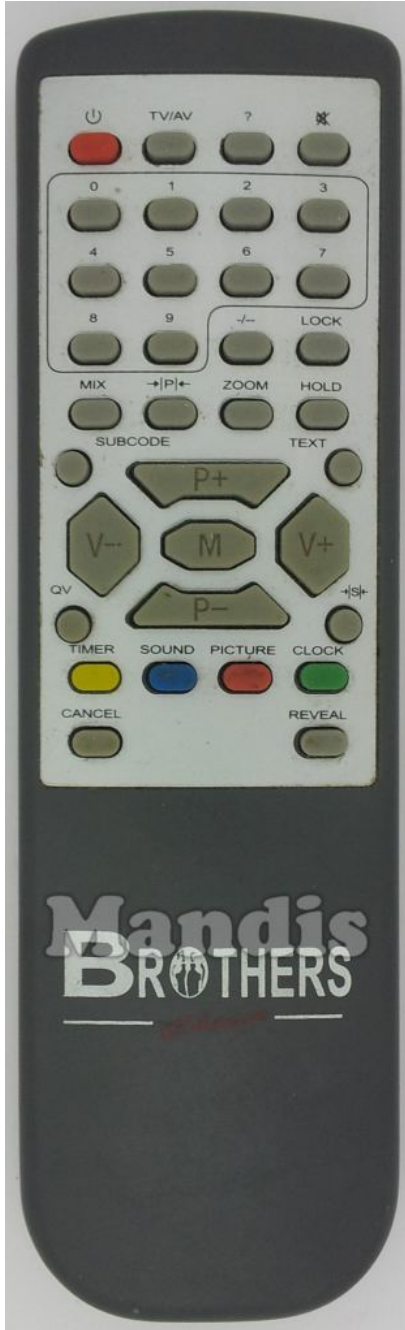 




 






 


Original	Replacement	Original	Replacement
 Power	 Power	 Hold	 Subt
 Tv/AV	 AV	 →IPI←	 Format
 ?	 Smart	 Mix	 Media
 Mute	 Mute	 Text	 Text
 0	 0	 Subcode	 Options
 1	 1	 QV	 TV/R
 2	 2	 →ISI←	 Dual
 3	 3	 Cancel	 Exit
 4	 4	 Reveal	 Back
 5	 5	 Yellow/Timer	 Yellow
 6	 6	 Blue/Sound	 Blue
 7	 7	 Red/Picture	 Red
 8	 8	 Green/Clock	 Green
 9	 9	 Up	 Up
 -/--	 Guide	 Down	 Down
 Lock	 Pre Ch	 Right	 Right
 Zoom	 Eject	 Left	 Left





Original		Replacement		Original		Replacement	
	OK		Ok				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	M		Menu				

