





 
 









 

 
























 

 

 

 

 











 

 

 

 
 
 
 
 

 

 

 









Original	Replacement	Original	Replacement
 Power	 Power	 FAV	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 1	 1	 Up / CH+	 Up
 2	 2	 Up / CH+	 CH+ / Page+
 3	 3	 Down / CH-	 Down
 4	 4	 Down / CH-	 CH- / Page-
 5	 5	 Left / Vol-	 Left
 6	 6	 Left / Vol-	 Vol-
 7	 7	 OK	 OK
 8	 8	 Right / Vol+	 Right
 9	 9	 Right / Vol+	 Vol+
 0	 0	 Red / Audio	 Red / Netflix / Search
 TV/R	 TV/Radio /	 Red / Audio	 Audio / Lang I/II
 SAT	 Shift + 0	 Green / Mode	 Green / APP / Repeat
 SAT	 Smart / List	 Yellow / Disp	 Yellow / YouTube / Repeat
 EPG	 Guide / EPG / -/--	 Yellow / Disp	 Display / Media
 Menu	 Menu / Home	 Blue	 Blue / Prime Video / Random

Original	Replacement	Original	Replacement
 FAV	 Fav / Marker / PC	 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear	 Exit	 Exit / Cancel / Clear
 Up / CH+	 Up	 Up / CH+	 CH+ / Page+
 Up / CH+	 CH+ / Page+	 Down / CH-	 Down
 Down / CH-	 Down	 Down / CH-	 CH- / Page-
 Down / CH-	 CH- / Page-	 Left / Vol-	 Left
 Left / Vol-	 Left	 Left / Vol-	 Vol-
 Left / Vol-	 Vol-	 OK	 OK
 OK	 OK	 Right / Vol+	 Right
 Right / Vol+	 Right	 Right / Vol+	 Vol+
 Right / Vol+	 Vol+	 Red / Audio	 Red / Netflix / Search
 Red / Audio	 Red / Netflix / Search	 Red / Audio	 Audio / Lang I/II
 Green / Mode	 Green / APP / Repeat	 Green / Mode	 Green / APP / Repeat
 Yellow / Disp	 Yellow / YouTube / Repeat	 Yellow / Disp	 Yellow / YouTube / Repeat
 Yellow / Disp	 Display / Media	 Yellow / Disp	 Display / Media
 Blue	 Blue / Prime Video / Random	 Blue	 Blue / Prime Video / Random





Original	Replacement
Page+	Shift + CH+ /
Page-	Shift + CH- /
Recall	Back / Return
F1 /Info	Info / Angle
F1 /Info	Shift + 1
F2 / SUB	Subtitle / EQ
F2 / SUB	Shift + 2
F3 / Goto	Shift + Text /
F3 / Goto	Shift + 3
TXT	Text / Goto
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
Stop / USB	Stop / Hold
Stop / USB	AV / Input / RDS

Original	Replacement
Stop / USB	Shift + 8
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode

