



Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		Z/Back
	7		CH+ / Page+
	8		Up
	9		Vol-
	0		Left
	AV/CL		OK
	Zoom		Right
	[...]/Subtitle		Vol+
	Audio/Language		Down
	</Camera		CH- / Page-
	?		TVG/Top Menu
			TVG/Top Menu
			TXT/Menu
			D.Menu / Top
			Text / Goto
			Text / Goto





Original	Replacement
	Menu / Home
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Zoom /
	Rec / Rec Mode
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	>> / Tune+

Original	Replacement





Original		Replacement		Original		Replacement	
	Power		Power		ECO		Display / Media
	1		1		CEC		Smart / List
	2		2		Mute		Mute / Dimmer
	3		3		i		Info / Angle
	4		4		Z/Back		Back / Return
	5		5		PR+		CH+ / Page+
	6		6		Up		Up
	7		7		Vol-		Vol-
	8		8		Left		Left
	9		9		OK		OK
	0		0		Right		Right
	AV/CL		AV / Input / RDS		Vol+		Vol+
	Zoom		Zoom / Size		Down		Down
	[...]/Subtitle		Subtitle / EQ		PR-		CH- / Page-
	Audio/Language		Audio / Lang I/II		TVG/Top Menu		Guide / EPG / -/--
	◀/Camera		Shift + Info / Angle		TVG/Top Menu		D.Menu / Top
	?		Setup / OPT /		TXT/Menu		Menu / Home





Original	Replacement
 TXT/Menu	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [< >]	 Shift + Zoom /
 Rec/I>	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement





Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		Z/Back
	7		PR+
	8		CH+ / Page+
	9		Up
	0		Vol-
	AV/CL		Left
	Zoom		OK
	[...]/Subtitle		Right
	Audio/Language		Vol+
	◀/Camera		Down
	?		PR-
			CH- / Page-
			TVG/Top Menu
			TVG/Top Menu
			TXT/Menu
			D.Menu / Top
			Text / Goto
			Text / Goto





Original	Replacement	Original	Replacement
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<		<< / Preset-
	>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		CH+ / Page+
	7		Up
	8		Vol-
	9		Left
	0		OK
	AV/CL		Right
	Zoom		Vol+
	[...]/Subtitle		Down
	Audio/Language		CH- / Page-
	◀/Camera		TVG/Top Menu
	?		TVG/Top Menu
			TXT/Menu
			D.Menu / Top
			Text / Goto
			D.Menu / Top
			Text / Goto





Original	Replacement
 TXT/MENU	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [<>]	 Shift + Zoom /
 Rec/I>	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <	 << / Preset-
 >	 >> / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement

