



Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/--		Red / <<		<< / Tune-

 







 



 

 

 

 

 



 

















 

 







 

 

 





 
 








Original		Replacement		Original		Replacement	
	Green / >>		>> / Tune+				
	Green / >>		Green / APP / Repeat				
	Yellow / I<<		I<< / Preset-				
	Yellow / I<<		Yellow / YouTube / Repeat				
	Blue / >>I		Blue / Prime Video / Random				
	Blue / >>I		>>I / Preset+				
	Text / Play/Pause		Text / Goto				
	Text / Play/Pause		Pause / Step / Freeze				
	Text / Play/Pause		Play / Slow				
	Stop / Still		Stop / Hold				
	Timer / Subtitle		Subtitle / EQ				
	Size / Aspect		Zoom / Size				
	Cancel [≡X]	+	Shift + Exit / Cancel / Clear				
	Radio		TV/Radio /				
	Audio / I/II		Audio / Lang I/II				
	Rec		Rec / Rec Mode				





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Replacement	Original	Replacement
	Green / APP / Repeat		
	>> / Tune+		
	Yellow / YouTube / Repeat		
	I<< / Preset-		
	Blue / Prime Video / Random		
	>> / Preset+		
	Play / Slow		
	Pause / Step / Freeze		
	Text / Goto		
	Stop / Hold		
	Picture / Format		
	Subtitle / EQ		
	Zoom / Size		
	Setup / OPT /		
	TV/Radio /		
	Audio / Lang I/II		
	Rec / Rec Mode		

