



 



 



 








 























Original	Replacement
	 Power
	 Mute / Dimmer
	 Shift + Audio / Lang I/II
	 Shift + Picture / Format
	 Picture / Format
	 Sound / Title
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/--
	 0

Original	Replacement
	 Back / Return
	 Display / Media
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Exit / Cancel / Clear





Original	Replacement	Original	Replacement
 CH+ / Page+	 CH+ / Page+	 DTV	 Smart / List
 Subtitle	 Subtitle / EQ	 EPG	 Guide / EPG / -/-
 Vol+	 Vol+	 Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-		
 T.Shift	 Setup / OPT /		
 Vol-	 Vol-		
 Play/Pause/Hold	 Play / Slow		
 Play/Pause/Hold	 +  Shift + Stop /		
 <</Reveal	 << / Tune-		
 >>/Size	 Zoom / Size		
 >>/Size	 >> / Tune+		
 Stop/Index	 Stop / Hold		
 I<<	 I<< / Preset-		
 S.Page/>>I	 >>I / Preset+		
 Text	 Text / Goto		
 FAV	 Fav / Marker / PC		
 Audio	 Audio / Lang I/II		

