




 






Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 Shift + Guide / EPG / -/-
 Recall	 Back / Return
 Vol+	 Vol+
 I/II/Audio	 Audio / Lang I/II
 Auto	 Smart / List

Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
	 Up
	 Left
 OK/Enter	 OK
	 Right
 Menu	 Menu / Home
	 Down
 Exit	 Exit / Cancel / Clear
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Play/Pause / Size	 Zoom / Size
 Play/Pause / Size	 Play / Slow





Original	Replacement	Original	Replacement
 Play/Pause / Size	 Pause / Step / Freeze		
 Stop/Hold	 Stop / Hold		
 Text	 Text / Goto		
 Subtitle	 Subtitle / EQ		
 <</Index	 << / Tune-		
 >>/Reveal	 >> / Tune+		
 I<</Subpage	 I<< / Preset-		
 >>I/FAV	 >>I / Preset+		
 >>I/FAV	 Fav / Marker / PC		
 Media	 Shift + Display / Media		
 Rec	 Rec / Rec Mode		
 EPG	 Guide / EPG / -/-		
 Tv/Radio	 TV/Radio /		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

