


 


 





 
 

 


 







 
 






Original	Replacement	Original	Replacement
	Power		Source
	Mute		AV / Input / RDS
	1		Up
	2		Audio / Nicam
	3		Audio / Lang I/II
	4		Left
	5		OK
	6		Right
	7		Down
	8		Exit
	9		Menu
	Recall		Vol+
	0		Mouse On/Off
	Sleep		CH+ / Page+
	Shift + 1		Vol-
	Shift + 2		Home
	CH.List		Shift + Menu /
			CH- / Page-
			P.Mode
			S.Mode
			Picture / Format
			Sound / Title



